


Configurations ★ Popular Configuration

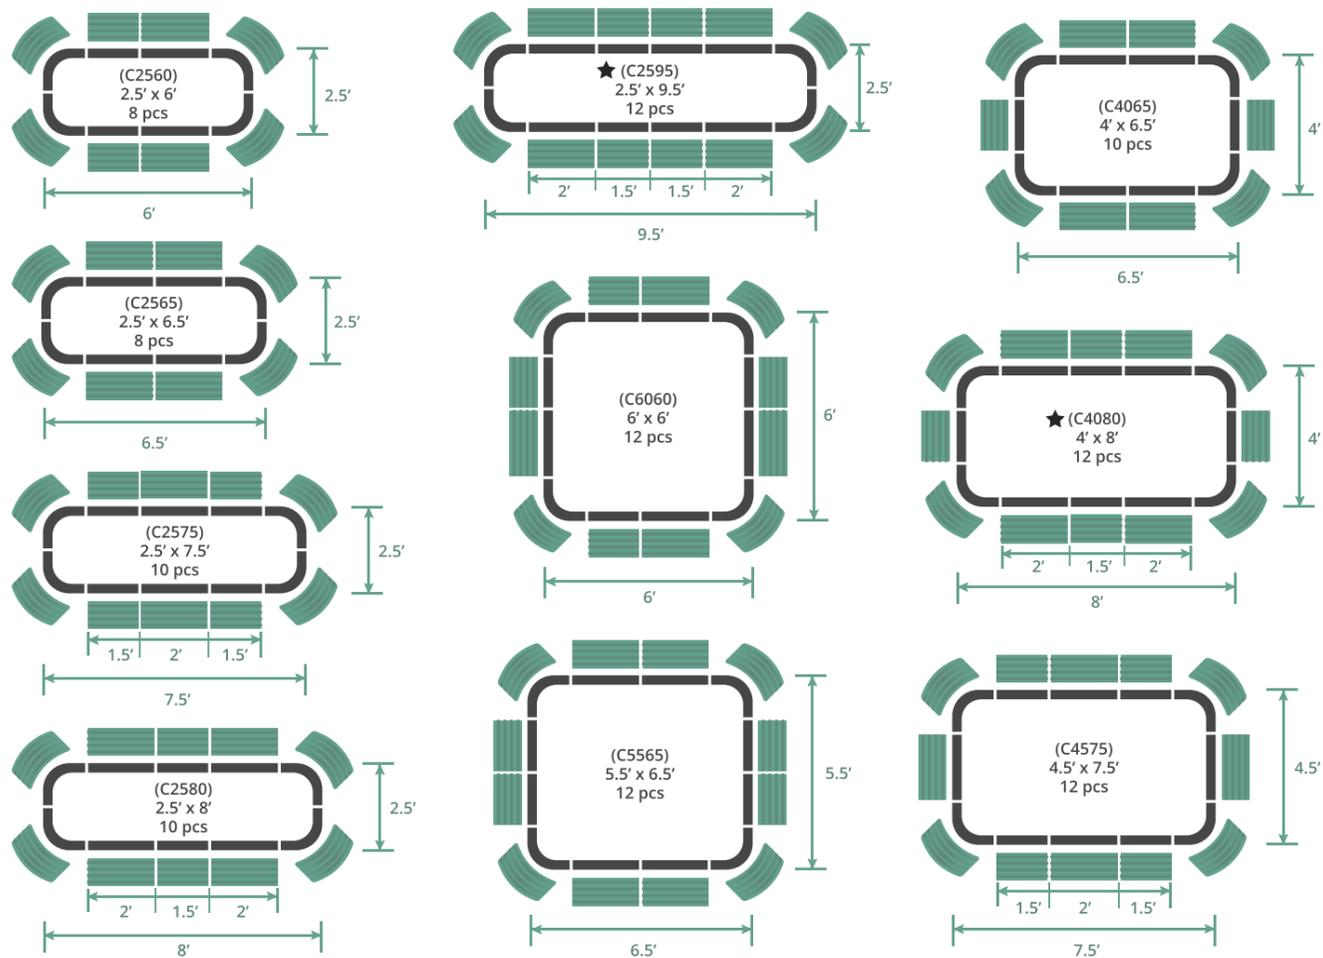


With only one kit, you can assemble your Vego modular raised bed into 1 of 10 different configurations to fit any backyard space. From the classic 4' x 8' to the long 2.5' x 9.5', there's something for every garden space.
 Note: Due to the manufacturing process raised bed sizing may vary +/- 2 inches.

Dimensions

Configurations	Length (ft)	Width (ft)	Height (in)	Cubic Feet	Cubic Yards
★ C4080	4.0	8.0	11	29.3	1.1
★ C2595	2.5	9.5	11	21.8	0.8
C2565	2.5	6.5	11	14.9	0.6
C2575	2.5	7.5	11	17.1	0.6
C2580	2.5	8.0	11	18.3	0.7
C4065	4.0	6.5	11	23.8	0.9
C2550	2.5	5.0	11	11.4	0.4
C4575	4.5	7.5	11	30.9	1.1
C6060	6.0	6.0	11	33	1.2
C5565	5.5	6.5	11	32.8	1.2

vegō garden®

11 Inch Tall 10 In 1 Modular Metal Raised Bed

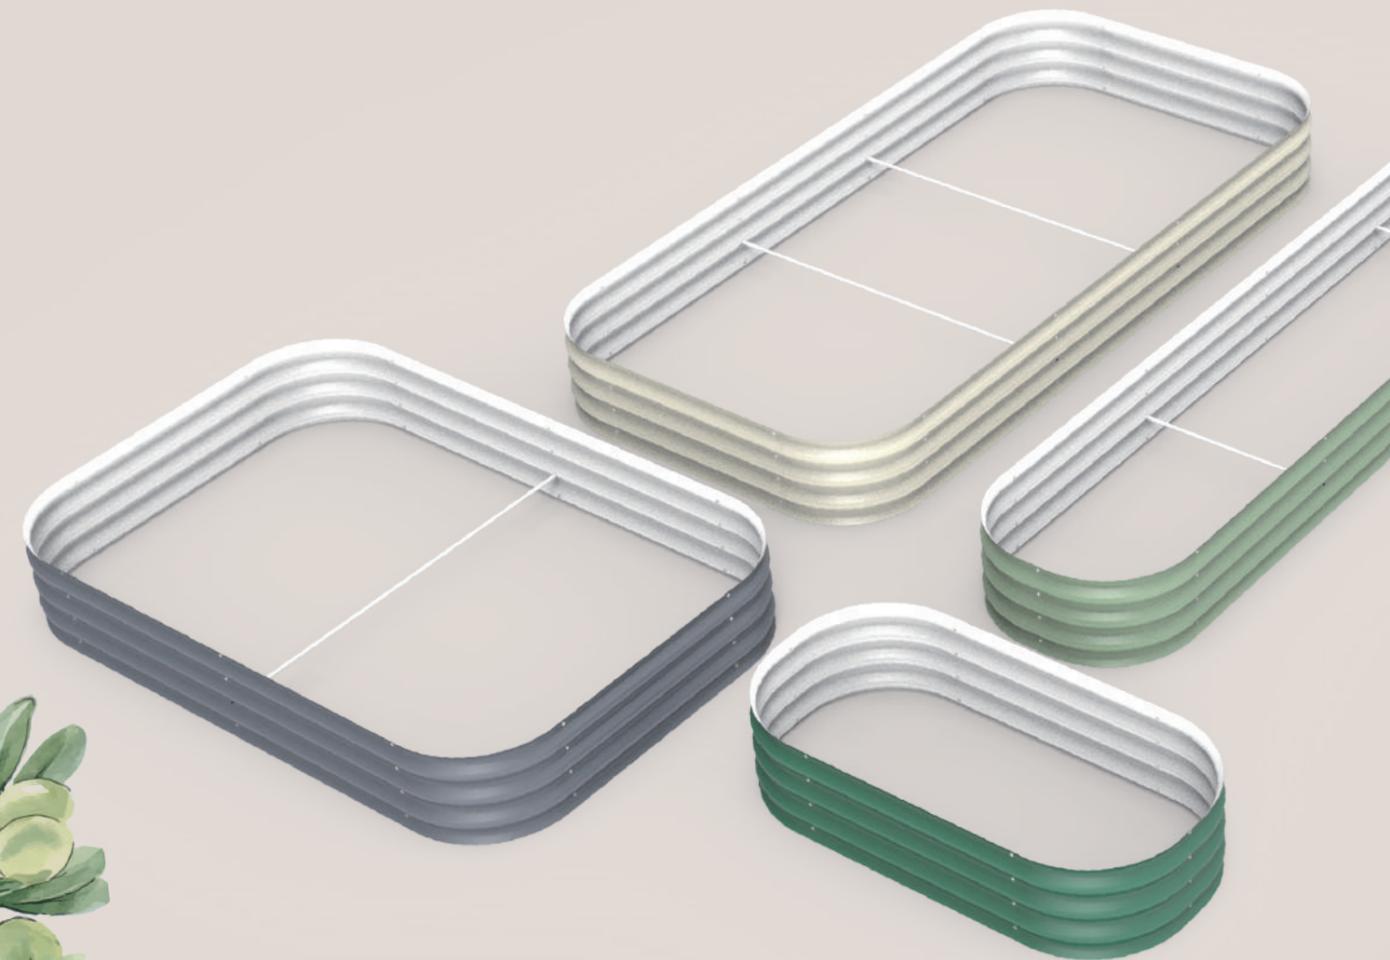

CAUTION: Please be aware the metal panels may have sharp edges that could cause injury. The use of protective equipment such as gloves and closed toe shoes is recommended.

CHOKING HAZARD: Small parts. Keep product away from children.

Contact Us



+1 (866) 597-1888



hello@vegogarden.com



www.vegogarden.com



Houston, TX 77032



vego_garden



Vego Garden-Raised Beds

Parts List

SC12 x 4
Corner Panel

SS15 x 4
Side Panel 1.5ft

SS20 x 4
Side Panel 2.0ft

SE x 1
Safety Edging

LW x 1
L Wrench

B1 x 48
Bolt M6

FN x 24
Standard Flange Nut

FCN x 24
Flange Cap Nut

BR40 x 2
Bracing Rod

More assembly videos!

5 Step 5

Push the safety edging along the top rolled steel edge, and cut the extra length off.

6 Step 6

Congratulations on completing assembly! We are sure there are more configurations that you can build with your great imagination!

Assembly Guide www.vegogarden.com/assembly

1 Step 1

Remove the protective film from all panels, and lay panels on a flat surface according to the configuration you choose.

2 Step 2

Cap nuts are used for the top two rows, standard nuts are used for the lower two rows. Assemble all straight panels. First, attach all bolts and nuts loosely, then tighten using the wrench or with a screwdriver and cordless drill.

3 Step 3

Standard Flange Nut

Flange Cap Nut

Make sure to tighten each nut and bolt to support the raised garden bed.

4 Step 4

After straight panels are assembled, attach corner panels to straight panels using the same method. Make sure corner panels are attached outside of the straight panels.

Bracing Rod Installation Guide

1 Step 1

Threaded Pin

Rod A

Rod B

Vego Garden bracing rods are used to reinforce the strength of oversized raised beds. For 2.5ft wide raised beds, use Rod A only; For 4ft wide raised beds, use the Threaded Pin to connect Rod A & Rod B.

2 Step 2

Bolt

Install the bracing rod between two parallel bolt holes. Attach bolt, panel, washer & rod loosely, making sure that the rod is connected in the **third** bolt hole from the top. Then tighten it up with the screwdriver for reinforcement of raised bed.

3 Step 3

Rod A

Rod B

4ft wide raised beds

Rod A

2.5ft wide raised beds